
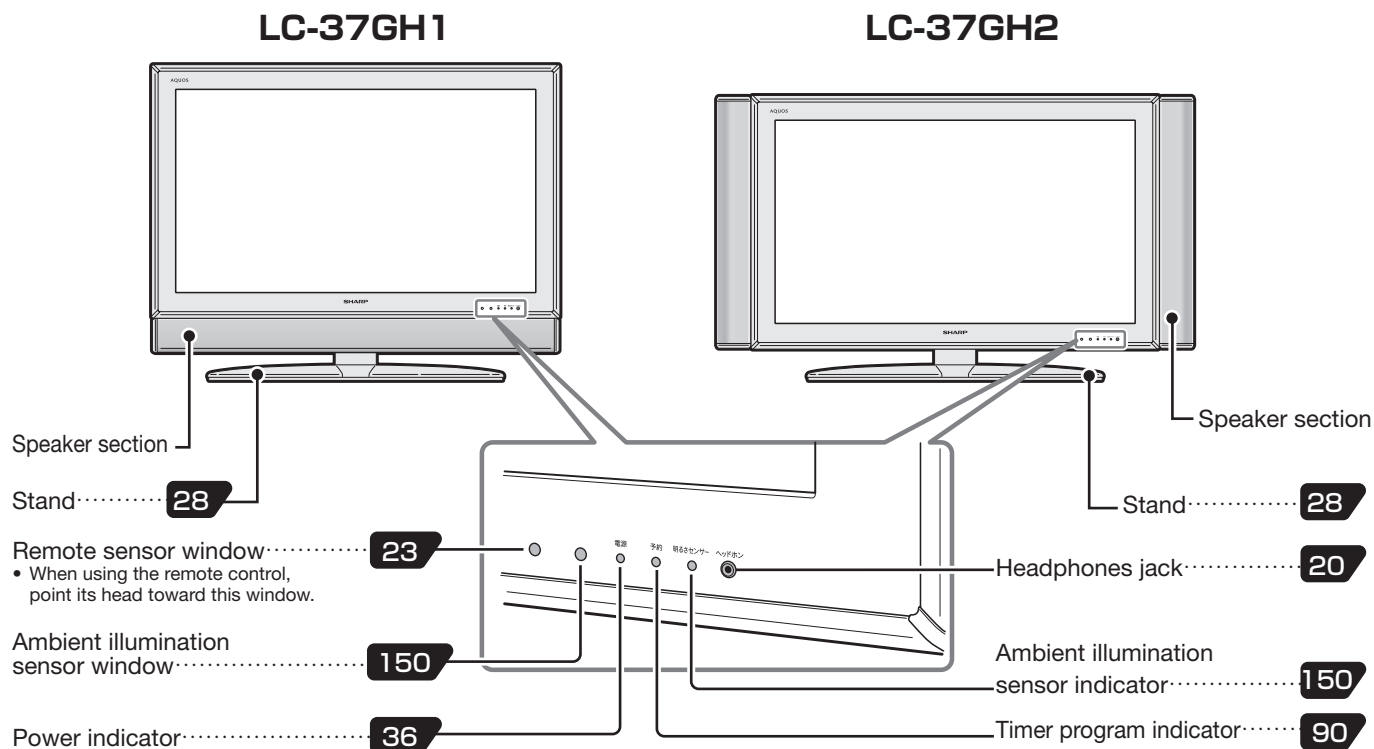



Part Names – Main Unit

■ The number shown in each  is the page number where the part's function and/or use are explained either in English or Japanese.

Front view




Top view

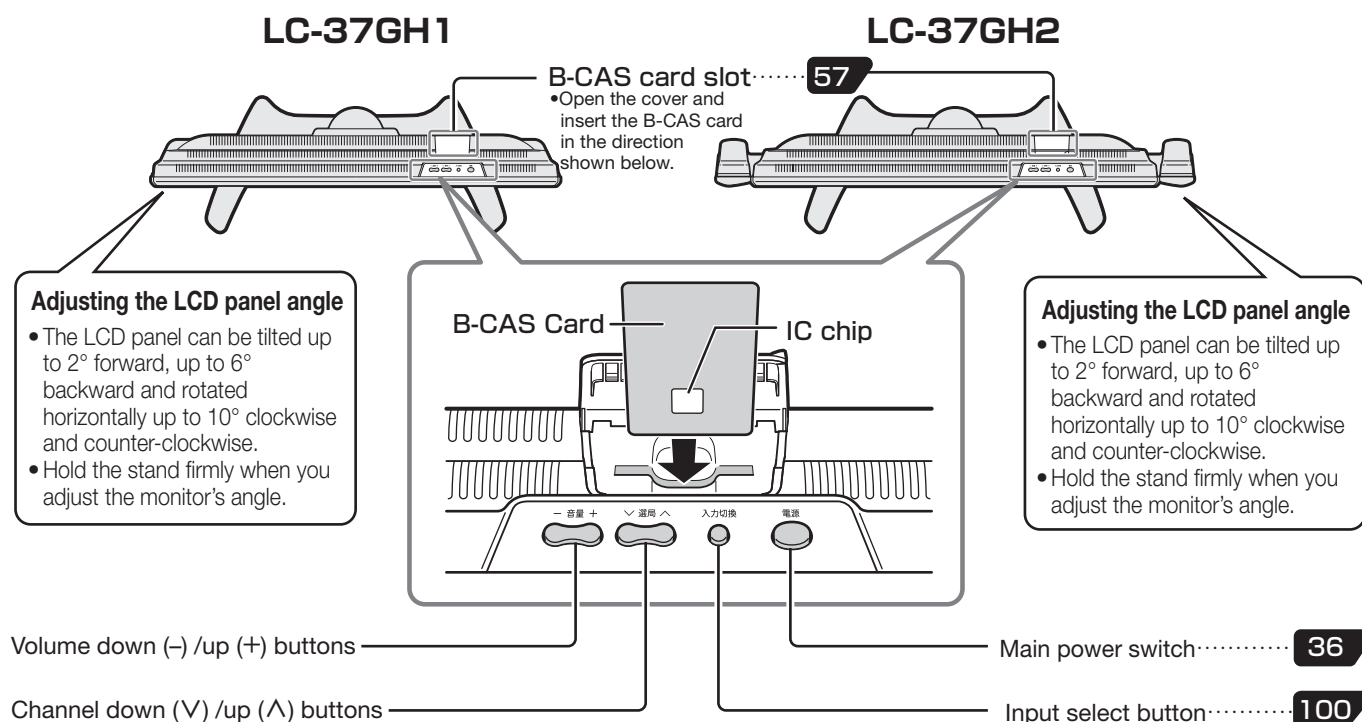


Rear view


The illustrations below are those of LC-37GH1. LC-37GH2 has the same layout of jacks and terminals as LC-37GH1.

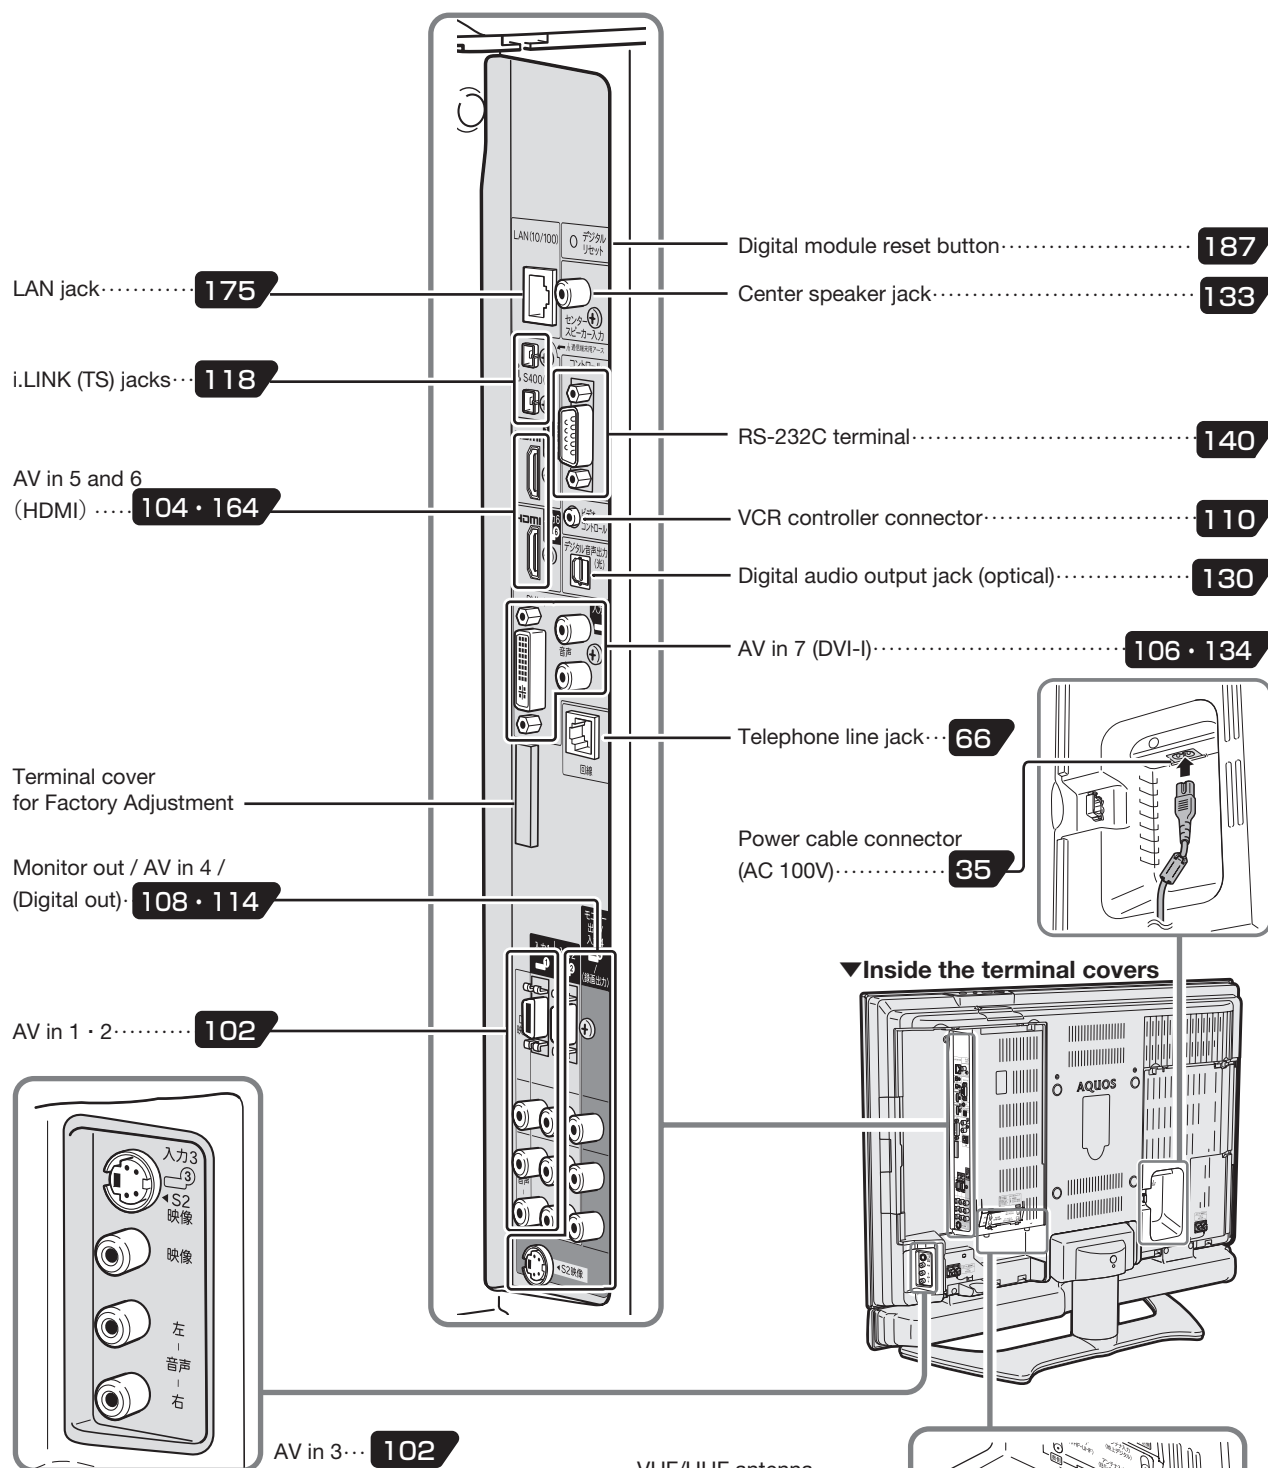

Opening the terminal covers

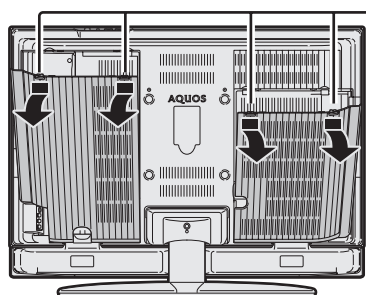


Holding the lock at the top of the cover downward, pull the cover off the back of the main unit.

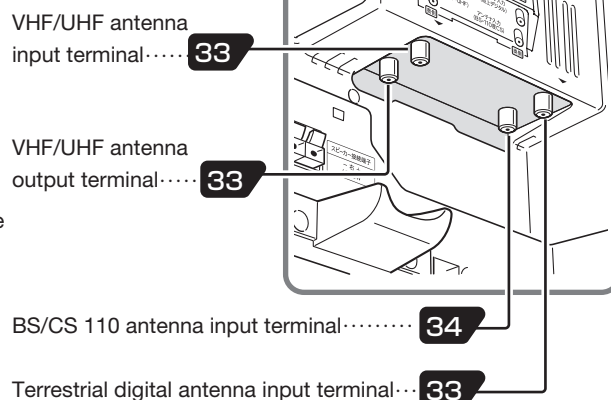

Part Names — Remote Control Unit

Cover closed

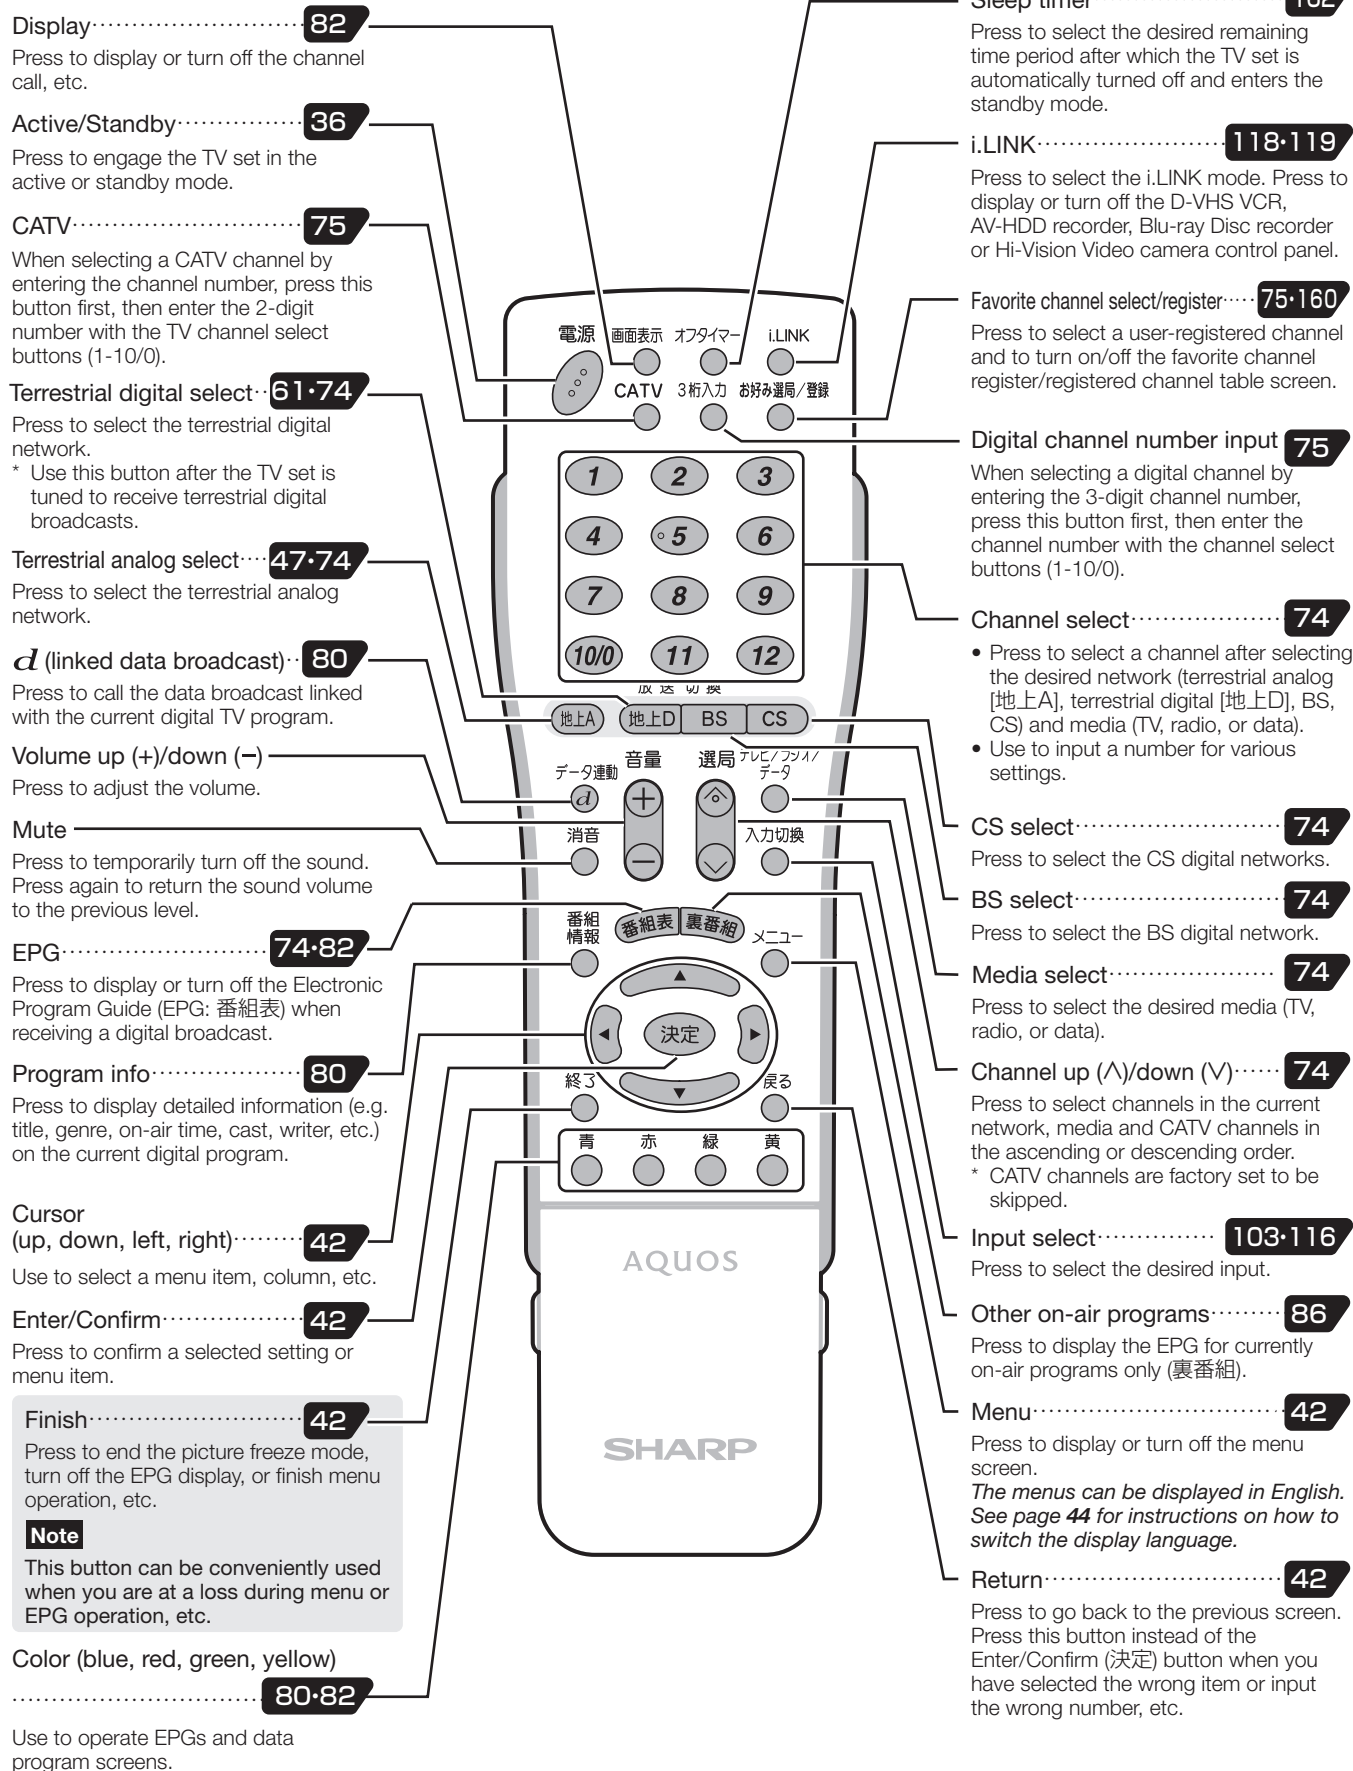

Cover open

Picture select.....79

Press to select the desired picture when watching a digital multi-picture program.

Screen mode.....136·145

Press to select the desired screen mode.

AV mode select.....149

Press to select the picture/sound setting (dynamic [locked], dynamic, standard, cinema, game, or AV memory) that best matches the current program.

Freeze.....159

Press to freeze the picture.

HDMI CONTROL.....163

Press to operate HDMI CONTROL Recorders and AQUOS Surround connected via HDMI cables.

Caption.....171

Press to display, select, or turn off captions when watching a digital program with captions.

Audio select.....79·154

Press to select the desired audio (e.g. Japanese or English in bilingual broadcast, the main sound or a sub sound in digital multi-sound broadcast, etc.).

Operable screen.....158


Press to switch the operable screen (screen with the ♪ mark) when the TV set is in the split screen mode.

Split screen.....158


Press to switch between the split screen mode and the normal screen mode.

To open the cover

Hold the cover by the projections on both sides and lift upwards.

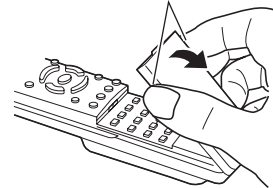

Basic operation for channel selection

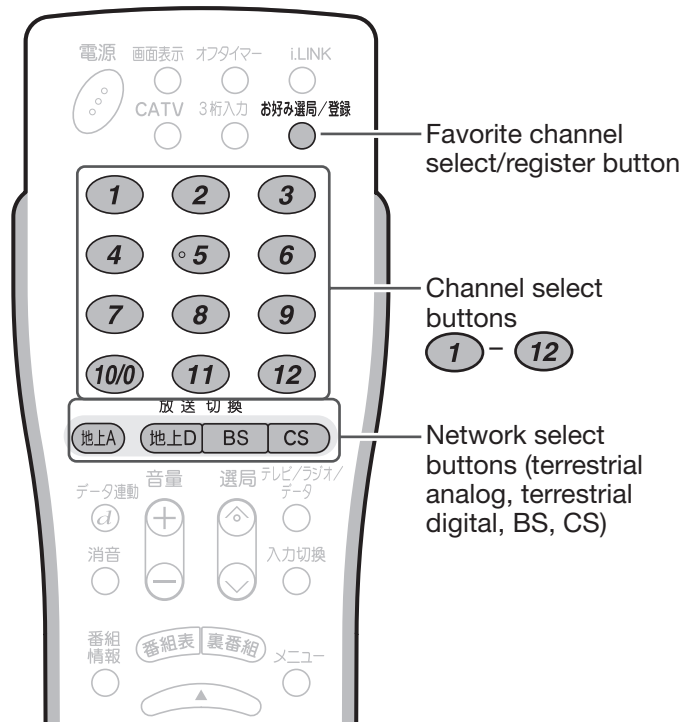

Selecting terrestrial analog (VHF/UHF) channels

- ① Press **地上A** to select terrestrial analog broadcast.
- ② Press **1** - **12** to select the desired channel.

Selecting digital channels

- ① Press **地上D**, **BS** or **CS** to select the desired digital broadcast network.
- ② Press **1** - **12** to select the desired channel.

Types of broadcast

- **地上A** Terrestrial analog: Conventional VHF/UHF broadcast
- **地上D** Terrestrial digital: Terrestrial digital broadcast
- **BS** BS: BS digital broadcast
- **CS** CS: CS 110 digital broadcast

■ For details about channel selection, see page 74.

Selecting favorite channels

- ① Press **お好み選局/登録** to display the registered channel screen.
- ② Press **1** - **12** to select the desired channel.